

# A New MPEG IMX Camcorder: the Best Choice for Creativity, Quality, and Reliability

As the industry has moved to embrace digital networked broadcasting, professionals at every level now appreciate the significant benefits of consistent MPEG compression throughout the entire production process. MPEG-2, the standard for DTV distribution, selected for its quality, cost efficiency, and transmission efficiency, has naturally become the strategic choice in a variety of production and postproduction applications.

Sony's first response to this demand was the MPEG IMX Series, consisting of the MSW-2000 Series VTRs and the associated MSW-900 camcorder, which operate on MPEG-2 4:2:2P@ML, I-frame-only compression. The MSW-900 camcorder demonstrated the flexibility of using MPEG compression with its 50-, 40-, and 30-Mb/s-selectable bit-rate recording – a significant advantage when running costs versus quality is a prime concern.

With drastic changes in today's and tomorrow's production environments, Sony now introduces its second-generation MPEG IMX camcorder, the MSW-970, which inherits the full functionality of the MSW-900 and adds much more. Maintaining its core concept as the workhorse model for ENG (Electronic News Gathering) and EFP (Electronic Field Production) operations, the MSW-970 brings a new level of creativity and quality into many production fields. As well as using new Power HAD<sup>TM</sup> EX CCDs and 14-bit A/D conversion for uncompromised camera image quality, this camcorder expands your shooting creativity by incorporating unique shooting functions including 24P capability\* and a slow shutter function.

These factors, combined with the ultra-robust designs for which Sony camcorders are renowned, make the MSW-970 an ideal and affordable solution for a variety of applications from daily ENG and EFP operations to digital cinema productions.

\*For MSW-970 (NTSC model) only.

#### Brilliant performance

#### High Picture Quality using MPEG-2 4:2:2P@ML 50 Mb/s I-frame Compression

The MSW-970 employs MPEG-2 4:2:2P@ML recording, which uses a high bit rate of 50 Mb/s to provide outstanding picture quality. The MSW-970 camcorder also offers the wide flexibility of using MPEG compression with its 50-, 40- and 30-Mb/s selectable bit-rate recording. Combining high picture quality with MPEG interoperability, the MSW-970 seamlessly works in a wide range of applications including ENG and EFP.

#### Power HAD EX CCD

The MSW-970 camcorder is equipped with proven state-of-the-art three-chip 2/3-inch type Sony Power HAD EX CCDs. This CCD imager achieves a high sensitivity of F11, an excellent signal-to-noise ratio of -65 dB (NTSC)/-63 dB (PAL) and a remarkably low smear level of -145 dB (typical), allowing the MSW-970 to produce pictures of stunning quality. Integration of the Power HAD EX CCDs also allows for progressive scanning, including 24P\* for film-like effects.

\*For MSW-970 (NTSC model) only, optional CBK-FC01 required.

# Advanced Digital Signal Processing (ADSP)

A key to quality in DSP cameras is how many bits are used in their nonlinear process, such as gamma correction. The ADSP of the MSW-970 camcorder uses more than 30 bits in its nonlinear process, minimizing round-off errors to maintain the high quality of the Power HAD EX CCDs. The ADSP also enables highly sophisticated image controls, such as the multi-matrix function, triple skin-tone detail control, and adaptive highlight control.

### 14-bit A/D Conversion

The MSW-970 incorporates a high-integrity 14-bit A/D conversion circuit so that images captured by the Power HAD EX CCDs are processed with great precision. This high-resolution A/D conversion allows the contrast to be reproduced faithfully in both mid-to-dark tone and bright areas of the picture.



# **Operational versatility**

#### Rugged and Ergonomic Design

The design of the MSW-970 is based on years of Sony experience in camera ergonomics, and provides high mobility and balance. All switches, indicators, and an LCD panel are in the most logical places and are positioned for optimum functionality and ease of use. Operators will immediately feel at home with the MSW-970, which takes user comfort to new levels.

#### Compact, Lightweight, and Low Power Consumption

The MSW-970 is designed to be extremely compact and lightweight, providing a high level of mobility in the field. It weighs approximately 5.4 kg (11 lb. 14 oz.) including a viewfinder, microphone, BP-GL95 Battery Pack, and BCT-60MX cassette tape. With its new-generation LSI, the camcorder achieves a low power consumption of just 27W.

#### Versatile Interfaces

The MSW-970 provides an analog composite output as standard, with an SDI output board (the CBK-SD01) available as a plug-in option. An optional composite input board (the CBK-SC01) is also available for pool feed applications. These optional boards install within the camcorder chassis to eliminate the need for an external camera adaptor unit, maintaining the compactness and balance of the camcorder.

#### Camera Remote Control

Camera settings and basic VTR functions can be remotely controlled using an optional RM-B150 or RM-B750 Remote Control Unit via its 8-pin remote connector.

#### **Dual Optical Filters Plus Electric Color Correction**

The MSW-970 comes equipped with dual optical filters for Color Correction (CC) and Neutral Density (ND) for flexible color and exposure control. In addition, it is equipped with an electronic Color Correction function, which gives operators the choice of correcting color temperature optically or electronically, according to their needs.

#### **Assignable Functions**

Functions frequently used in the field can be assigned to a push button and a simple slide switch, allowing the operator to make rapid changes when working in the field. The following functions can be assigned:

- Push button: disable, picture cache on/off, test out character on/off, VF marker on/off, re-take, ATW on/off, return video, lens return, recording start/stop, turbo gain on/off, zebra on/off, D5600 on/off
- Slide switch: disable, picture cache on/off, test out character on/off, marker on/off, recording video source selection (camcorder/external equipment), zebra on/off, D5600 on/off





#### **User-friendly Menu Controls**

The MSW-970 offers an easy-to-use menu system to facilitate detailed camera settings. Setup parameters are well organized in a two-layer menu system: a user menu and a sub menu. The user menu allows access only to the standard setup functions needed by the camera operator, and can be customized for fast access to the menus they use frequently. The sub menu makes all menus accessible, each of which is categorized into groups such as paint, file, and maintenance. Menu pages can be displayed in the camcorder viewfinder, as well as on a monitor screen via the video outputs, and the menu control system can be operated easily using a rotary switch on the camcorder.

#### Battery Remaining Display on Viewfinder

With a Sony Professional Info Battery, the remaining capacity is automatically detected and transmitted to the MSW-970 camcorder. The remaining capacity is indicated in the camcorder viewfinder in 10% steps.



#### Intelligent Light System

An optional portable light (maximum 50 W) can be attached to the camcorder, using a standard lighting connector and specially

designed short cable for operation from the camcorder battery. The light can be switched on and off manually, or automatically synchronized with the camcorder's REC start function.





### Slot-in Mechanism for Wireless Microphone Receiver

An optional Sony wireless microphone receiver, the WRR-855A/855B, slots directly into the camcorder body without requiring a cable connection. This maintains camcorder balance and keeps the body compact, avoiding any loss of mobility.



#### Turbo Gain

The Turbo Gain function boosts the gain level up to +48 dB at the touch of a button. This makes it possible to shoot in extremely low light conditions. The Turbo Gain value can be selected from the menu.

## Memory Stick<sup>™</sup> System Stores Camera Setup Parameters

The MSW-970 incorporates the Sony Memory Stick system for the storage and recall of setup parameters. This is an easy, effective system for storing and recalling camera parameters for individual scenes, plus individual operators' camera-setup preferences including assignable button settings.









The position of the shoulder pad can be adjusted either forwards or backwards without using a screwdriver — to provide operators with a comfortable and well-balanced camera.


# **Creative versatility**

#### Film-like Images with Progressive Mode

Incorporating Sony Power HAD EX CCDs, the MSW-970 (NTSC model) and MSW-970P (PAL model) generate progressive images of 29.97P and 25P respectively, delivering outstanding clarity as well as a cinematic look. In addition, the MSW-970 can produce 24P\* images when an optional CBK-FC01 Pull-down Board is installed, offering film-like motion effects. Images captured in 24P scanning mode in the camera head are 2-3 pull-downed and recorded on tape at 59.94i field rate.

\*For MSW-970 (NTSC model) only.

Camera motion: 24P

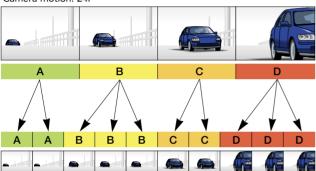

VTR recording: 59.94i

#### **Slow Shutter**

The MSW-970 offers a Slow Shutter function for shooting in low-light conditions, which can be used depending on the shooting situation or the operator's preferences. Slow Shutter allows the operator to use shutter speeds longer than the frame rate.


- NTSC: 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, and 1/1.9 seconds
- PAL: 1/25, 1/12.5, 1/8.3, 1/6.3, 1/5, 1/4.2, 1/3.6, 1/3.1, and 1/1.6 seconds

(1 to 8 and 16 frame accumulation)

#### Picture Cache Recording

Picture Cache Recording\* is a convenient function whereby up to eight seconds of video signal are buffered into memory before the REC button is even pressed. This means that everything that happened eight seconds before the REC button was pressed, in Standby mode, will still be recorded to tape – a capability that can help prevent the loss of unexpected but important events occurring before the operator even has the chance to press the REC button.


\*Optional MSDW-903 required.



#### **Interval Recording**

Interval Recording\* is also a useful function that intermittently records signals at pre-determined intervals (automatic and manual), ideal for recording over long periods. In manual mode, up to eight frames are recorded every time the REC button is pressed. In auto mode, the camera records frames at pre-determined intervals over a pre-determined total shooting time. In both modes, frames are initially stored in memory (the Picture Cache board) and, when this becomes full, the contents are copied to tape. This allows recordings to be made over long time periods on a single tape, and minimizes wear of the tape-drive mechanism.

\*Optional MSDW-903 required.

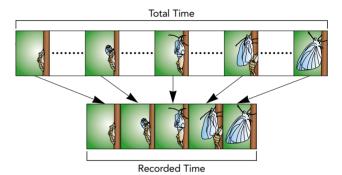

#### TruEye<sup>™</sup> Processor

The Sony TruEye processor is one of the most innovative features of Sony digital signal processing technology. This technology makes it possible to virtually eliminate hue distortion, particularly obvious in high light conditions that result from conventional RGB analog or digital processing. By processing the video signal data at three levels – brightness, hue, and saturation – similar to how the human eye works, the TruEye feature assists in the reproduction of natural skin tones.




Conventional Video Equipment



TruEye Simulated image

#### **Adaptive Highlight Control**

The MSW-970 camcorder provides multiple knee-points/slopes for superior overexposure control. The camcorder analyzes the highlight areas of a scene and automatically sets and optimizes multiple knee points/slopes accordingly. This enables the reproduction of extremely difficult images (such as an interior scene that includes a brightly sunlit window) with much more overexposure latitude. This function applies only to input video levels in excess of the knee point; the middle- and low-luminance parts of the video signal are unaffected by this control.

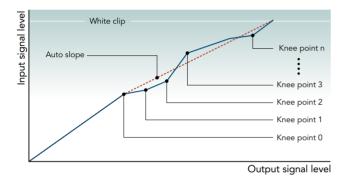

# Selectable Gamma Table Including Film-like Gamma

A selectable gamma table is provided to easily give a specific look to a picture by selecting from multiple fixed gamma patterns including so-called film-like gamma. Five patterns of film-like gamma and six patterns of standard gamma can be selected.

#### **Triple Skin Tone Detail Control**

The MSW-970 comes equipped with a Triple Skin Tone Detail function, which allows for independent detail control over three specified colors. This enhances the capability of Skin Tone Detail correction - enabling one color selection to be used for reducing the detail level of skin color, and two other selections to be used for either increasing or decreasing the detail level of two other objects.

#### Variable Black Gamma Range

The Variable Black Gamma Range function allows for fine adjustment of tonal reproduction in the shadow area. This feature can help to bring out details from the dark parts of the picture without affecting mid-tones while maintaining the absolute black level. The variable range is LOW, Low MID, High MID, and HIGH.

#### Auto Tracing White Balance (ATW)

The MSW-970 offers an Auto Tracing White Balance function that automatically adjusts the camera's color temperature in real time with a change of the lighting. This is especially useful when a shoot is performed across different environments, such as from indoors to outdoors.

#### **Multi-matrix Function**

The Multi-matrix function enables color adjustments to be applied over a color and/or hue range as specified by the operator. The color spectrum is divided into 16 areas of adjustment, where the hue and/or saturation of each area can be adjusted. This provides interesting in-camera color effects – similar to secondary color correction.





Multi-matrix ON Simulated image

#### **Electronic Soft Focus**

The Electronic Soft Focus included in the camcorder applies an effect similar to using an optical soft-focus filter – but in a much more convenient way. Electronic Soft Focus uses the detail signal to reduce, rather than increase, the sharpness of the picture. By subtracting the detail signal from the original signal (as opposed to adding it as in conventional image enhancement), Electronic Soft Focus is able to provide a picture that is "softer" than that achieved when detail is switched off completely. Electronic Soft Focus can be used in conjunction with Skin Tone Detail to change only the sharpness within a specific color or hue range.

#### **Color Temperature Control**

It is possible to dial in the required color temperature of the camera. The overall color balance of the picture can be changed to make it warmer or cooler. This feature can be used very creatively, particularly in scenes with mixed color lighting.

# Metadata handling

#### **UMID\***<sup>1</sup> Recording

The UMID is a globally unique identifier for created picture, audio, and data material. The MSW-970 automatically generates and records UMID information on tape at every scene change. By adding UMID information during the acquisition process, it is far easier to search for material during editing and archiving. Sony supports UMID as well as Extended UMID\*2 for further operational convenience.

- \*1 UMID is recognized as a standard under SMPTE 330M.
- \*2 Extended UMID adds signature metadata, time, positioning, and user information to the Basic UMID.

L-	Extended UMID (64 bytes)									
-	Bas	ic UMI	ID (32 bytes)	Signature Metadata (32 bytes)						
Universal Label	L	Inst No.	Material Number	Time/Date	Spatial Co-ordinates	Country	Org	User		
12 bytes	[1]	3   bvtes	16 bytes	8 bytes	12 bytes	4	4 bvtes	4		

#### **Essence Mark™ Handling**

Essence Marks can be set during the shoot either manually or automatically. Each time the 'return' button on the lens is pressed, an Essence Mark is set. When a tape containing Essence Marks is played back on a MSW-2000 Series VTR, the Essence Mark positions are automatically detected and a list of all marks is generated for display on a video monitor. This allows operators to quickly select and cue-up to the scenes of interest.







MSW-2000 Series Time Code List Simulated image



#### Tele-File™ System

The Sony Tele-File system stores and recalls various types of production data, such as shot data and shot marks, onto and from a cassette label with a built-in memory IC. The MSW-970 camcorder is equipped with a Tele-File reader/writer module as standard, allowing for this information to be managed electronically. Use of the Tele-File system can significantly raise efficiency in the subsequent editing process and management of archives.




MPEG IMX tape and Tele-File system




# A wide range of optional accessories

A wide variety of accessories are available to greatly increase the versatility and operational performance of the MSW-970, making it suitable for many different applications.




CBK-SD01 SDI Output Board



CBK-FC01 24P (2-3 pulldown) Mode Board



MSDW-903 Picture Cache Board




MSDW-904 Analog Composite Input Board



**BKW-401** Viewfinder Rotation Bracket



RM-B150 Remote Control Unit



RM-B750 Remote Control Unit



AC-DN10 AC Adaptor



AC-DN2B AC Adaptor



BP-GL65/GL95 Lithium Ion Battery Pack



BC-L70 Battery Charger



BC-M150 Battery Charger



VCT-14 Tripod Adaptor



BCT-6MX/12MX/22MX/32MX/60MX MPEG IMX Tapes



MSH-32/64/128 Memory Stick media



WRR-855A/855B Wireless Microphone Receiver



WRR-862A/862B Dual Diversity Microphone Receiver



WLL-CA50 Wireless Camera Transmitter



WLL-RX55 Wireless Camera Receiver



ECM-670/672/678 Shotgun-type Electret Condenser Microphone

1-547-341-12 Fog-proof Filter

A-8262-537-A Viewfinder Eye-piece (high magnification)

A-8262-538-A Viewfinder Eye-piece (low magnification)


A-8267-737-A Viewfinder Eye-piece (standard magnification with special compensation for aberrations)

A-8314-798-A Viewfinder Eye-piece (high performance, x3)


X-3608-271-1 Standard Viewfinder Lens

A-8278-057-A Mounting Bracket for WRR-862A/862B

### System configuration

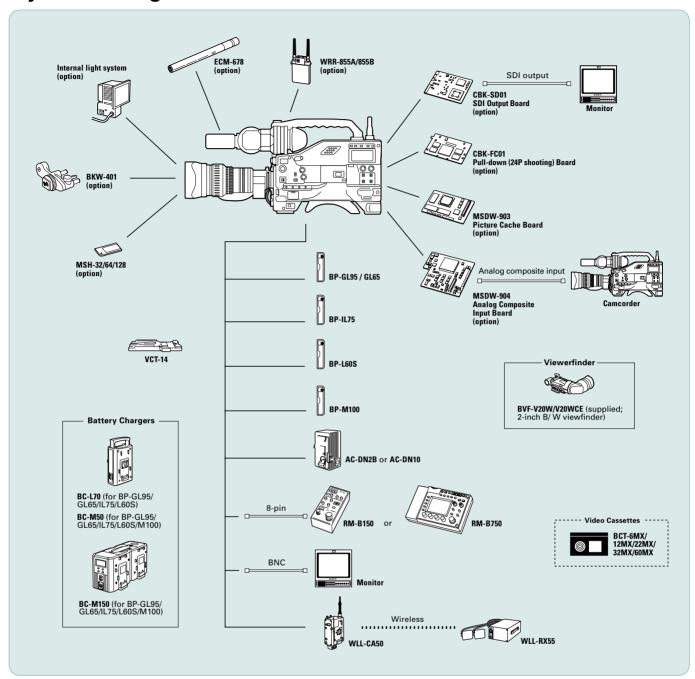

#### **Dimensions**

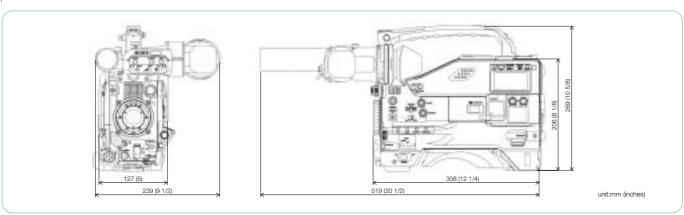

# **Specifications**

		NACIA/ 070	MCM OZOD			
	Mana	MSW-970	MSW-970P			
	Mass	Approx. 3.7 k				
	Power requirements	5.4 kg (with VF, Mic, BCT-60MX, BP-GL95) (11 lb 14 oz)  DC 12 V +5.0 V/-1.0 V				
General	Power consumption	Approx. 27 W (with DC 12V power supply, REC mode with VF)				
General	Operating temperature	0 to 40 °C (+32 °F to +104 °F)				
	Storage temperature	-20 to +60 °C (-4 °F to+140 °F)				
	Humidity	25 to 85% (rela	**			
	Continuous operating time  Genlock video	Approx. 180 min with BP-GL95 battery at 25°C (77°F), REC mode				
	Time code input	BNC type x1, 1.0 Vp-p, 75 Ω BNC type x1, 0.5 to 18 Vp-p, 10 kΩ				
Signal inputs	Video outputs SDI	BNC type x1, 0.8 Vp-p, 75 Ω (with the CBK-SD01)				
	Audio input (CH-1/2)	XLR-3-31 type x2, -60/-50/+4 dBu selectable, high impedance, balanced (0 dBu = 0.775 Vms.)				
	Mic input	XLR-3-31 type x1, -60/-50 dBu				
	Video output (Analog composite)	BNC type x1, 1.0 Vp-p, 75 Ω				
Cional autouta	Video test output	BNC type x1, 1.0 Vp-p, 75 Ω				
Signal outputs	Time code output  Earphone	BNC type x1, 1.0 Vp-p, 75 Ω				
	Audio output (CH-1/CH-2)	Minijack x2  XLR-5-pin male (stereo)				
	Lens	12-pin				
VF		20-pin				
	Remote	8-pin				
Others	Light	2-pin, DC 12 V, max. 50 W				
	DC input	XLR-4-pin (male, DC 11 to 17V)				
	DC output  Battery terminal	4-pin (for wireless microphone receiver), DC 12 V (max. 0.1 A)				
	Wireless receiver input	5-pin D-Sub 15-pin				
	Recording format Video	MPEG IMX (50				
	Audio	4 ch/16 bits/48 kHz,	4 ch/20 bits/48 kHz			
	Tape speed	64.467 mm/s	53.776 mm/s			
VTR section	Playback/Recording time	Max. 60 min. with BCT-60MX cassette	Max. 71 min. with BCT-60MX cassette			
	Fast forward time Rewind time	Approx. 5 min. with BCT-60MX				
	Recommended tape	Approx. 5 min. with BCT-60MX  Sony MPEG IMX S cassette (BCT-6MX/12MX/22MX/32MX/60MX)				
	Sampling frequency	Y: 13.5 MHz, R-Y/B-Y: 6.75 MHz				
Digital video	Quantization	8 bits/sample				
performance	K-factor (2T pulse)	Less than 1%				
	Y/R-Y/B-Y delay	Less that				
	Sampling frequency	48 kHz (synchror	·			
	Quantization Frequency response	20/16bits/ sample (selectable)  20 Hz to 20 kHz, +0.5 dB/-1.0 dB				
Digital	Dynamic range	More than 85 dB (emphasis ON)				
audio	Distortion (at 1 kHz, emphasis ON, reference level)					
performance	Cross talk (at 1 kHz, reference level)	Less than -70 dB				
	Wow & flutter	Below measurable limit				
	+ The appointment of the phone was made	20 dB (ex-fac ured via CA-701/702 Camcorder Adapter or MSDW-902 SDI output board.	tory setting)			
	Pickup device					
	<u> </u>		Power HAD EX CCD			
	Aspect ratio		Power HAD EX CCD witchable			
	Aspect ratio Total picture elements	16:9/4:3 s 1038 (H) x 1008 (V)				
		16:9/4:3 s	witchable 1038 (H) x 1188 (V)			
	Total picture elements Optical system Built-in optical filters	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, <i>F</i>	witchable 1038 (H) x 1188 (V) h quarts filter) s: CROSS, B: 3200K, C: 4300K, D: 6300K			
	Total picture elements Optical system Built-in optical filters Lens mount	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Som	witchable  1038 (H) x 1188 (V) h quarts filter) x: CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p	witchable  1038 (H) x 1188 (V) h quarts filter) x: CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance)	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Som 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 ix	witchable  1038 (H) x 1188 (V) h quarts filter) x: CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p , 89.9% reflectance)			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p	witchable  1038 (H) x 1188 (V)  h quarts filter) x: CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation)			
Commun	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow	witchable  1038 (H) x 1188 (V)  h quarts filter) x: CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation)			
Camera section	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB	witchable  1038 (H) x 1188 (V)  h quarts filter)  i: CROSS, B: 3200K, C: 4300K, D: 6300K  y bayonet mount  625/50i, 625/25p  , 89.9% reflectance)  shutter mode at 16-frame accumulation)  (typical)			
Camera section	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes	witchable  1038 (H) x 1188 (V) h quarts filter) ix CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount 625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation) (typical) 63 dB (typical) 480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode 575 TV lines at 625/25p mode			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode	witchable  1038 (H) x 1188 (V) h quarts filter) ix CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation) (typical)  63 dB (typical)  480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode  575 TV lines at 625/25p mode  1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/50i mode			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode	witchable  1038 (H) x 1188 (V) h quarts filter) ix CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount 625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation) (typical) 63 dB (typical) 480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode 575 TV lines at 625/25p mode			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution Shutter speed	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 lx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/23.976 mode	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1039 (H			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode	witchable  1038 (H) x 1188 (V) h quarts filter) ix CROSS, B: 3200K, C: 4300K, D: 6300K y bayonet mount  625/50i, 625/25p , 89.9% reflectance) shutter mode at 16-frame accumulation) (typical)  63 dB (typical)  480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode  575 TV lines at 625/25p mode  1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/50i mode			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution Shutter speed	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (with 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 1/64ND	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1039 (H			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution  Shutter speed  ECS	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode	witchable  1038 (H) x 1188 (V)  h quarts filter)  1: CROSS, B: 3200K, C: 4300K, D: 6300K  / bayonet mount  625/50i, 625/25p  , 89.9% reflectance)  shutter mode at 16-frame accumulation)  (typical)  63 dB (typical)  480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode  575 TV lines at 625/25p mode  1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/50i mode  1/33, 1/50, 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/25p mode  50 to 6000 Hz at 625/50i mode, 25 to 6000 Hz at 625/25p mode			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution  Shutter speed  ECS Slow shutter Gain selection Registration	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4: 1/64ND, 4: 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 k (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, 1/1.9 s (1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone)	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1039 (Filter)  1030 (Filtr)  1030 (Filt)  1030 (Fi			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 lx 0.008 lx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, 1/1.9 s (1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone)	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1039 (Filter)  1030 (Filtr)  1030 (Filt)  1030			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time Modulation depth at 5MHz	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz, 31, 1/19, 1/19, 1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone) 25, 1/10, 1/	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1039 (Filter)  1039 (Filtr)  1039 (Filt)  1039 (Filtr)  1039 (Fi			
section	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, 1/1.9 s (1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone) 2: 70% (16:9, typical) 2.0-inch type	witchable  1038 (H) x 1188 (V)  In quarts filter)			
	Total picture elements Optical system Built-in optical filters Lens mount Scan format Sensitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution  Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time Modulation depth at 5MHz CRT	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, A 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 kx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz, 31, 1/19, 1/19, 1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone) 25, 1/10, 1/	witchable  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  h quarts filter)  1038 (H) x 1188 (V)  1038 (H) x 1188 (V)  1039 (H) x 1030 (H)  1039 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1039 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1030 (H) x 1030 (H) x 1030 (H) x 1030 (H)  1030			
section	Total picture elements Optical system Built-in optical filters Lens mount Scan format Scanstivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution  Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time Modulation depth at 5MHz CRT Controls	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 k 0.008 lx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/59.94i mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, 1/1.9 s (1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone) 2.0-inch type (BRIGHT, CONTRAST, PEAKING control	witchable  1038 (H) x 1188 (V)  h quarts filter)  625/50i, 625/25p  89.9% reflectance)  shutter mode at 16-frame accumulation)  (typical)  63 dB (typical)  480 TV lines (with EVS) and 530 TV lines (without EVS) at 625/50i mode 575 TV lines at 625/25p mode  1/60, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/50i mode 1/33, 1/50, 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 625/25p mode  50 to 6000 Hz at 625/50i mode, 25 to 6000 Hz at 625/25p mode  1/25, 1/12.5, 1/8.3, 1/6.3, 1/5, 1/4.2, 1/3.6, 1/3.1, 1/1.6 s (1 to 8, 16 frames)  DW, GAIN MID, GAIN HIGH and GAIN TURBO positions)  s without lens)  s  5/55% (4:3, typical)  monochrome  lis, TALLY, ZEBRA, DISPLAY switches es (16:9)			
section	Total picture elements Optical system Built-in optical filters Lens mount Scan format Scansitivity (2000 lx, 89.9% reflectance) Minimum illumination Smear level Video S/N ratio Vertical resolution  Shutter speed  ECS Slow shutter Gain selection Registration Warm-up time Modulation depth at 5MHz CRT Controls Horizontal resolution	16:9/4:3 s 1038 (H) x 1008 (V) F1.4 prism (wit 1: Clear, 2: 1/4ND, 3: 1/16ND, 4: 1/64ND, 4 2/3 inch type Son 525/59.94i, 525/29.97p, 525/23.976p F11 (typical) (2000 lx 0.008 lx (F1.4 lens, +48 dB gain, with slow -145 dB 65 dB (typical) 450 TV lines (with EVS) and 400 TV lines (without EVS) at 525/59.94i mode 485 TV lines at 525/29.97p and 525/23.976p modes 1/100, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/40, 1/60, 1/120, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97p mode 1/32, 1/48, 1/96, 1/125, 1/250, 1/500, 1/1000, 1/2000 s at 525/29.97 mode 60 to 6000 Hz at 525/59.94i mode, 30 to 7000 Hz at 525/29.97 mode, 24 to 5000 Hz at 525/23.976 mode 1/30, 1/15, 1/10, 1/7.5, 1/6, 1/4.3, 1/3.8, 1/1.9 s (1 to 8, 16 frames) -3, 0, 3, 6, 9, 12, 18, 24, 30, 36, 42, 48 dB (for GAIN LC 0.05% (all zone) 70% (16:9, typical) 2.0-inch type IBRIGHT, CONTRAST, PEAKING control 450 TV line	witchable  1038 (H) x 1188 (V)  h quarts filter)  1030 (Explose the county of the			

# SONY

© 2005 Sony Corporation. All rights reserved.

Reproduction in whole or in part without written permission is prohibited.

Features and specifications are subject to change without notice.

Sony, MPEG IMX, Memory Stick, Power HAD, Essence Mark, Tele-File, and TruEye are trademarks of Sony corporation.

#### **Distributed by**